


**CUSTOM RECESSED DIVA INSTALLATION INSTRUCTIONS**



**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

**CUTOUT TABLE**

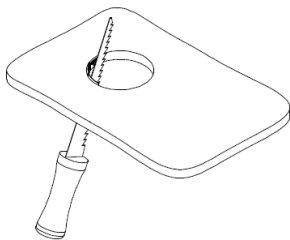





FIXTURE	CUTOUT
CUSTOM DIVA 3 RM	121mm x Xmm / 4.75" x X"

**TO DETERMINE LENGTH DIMENSION X  
ADD 2 cm or 3/4" TO THE CUSTOM LENGTH ORDERED.**

**NOTE: ROUND FRAME INSTALLATION SHOWN, FOLLOW SAME PROCEDURE FOR SQUARE FRAME.**

# FIXTURE INSTALLATION

---

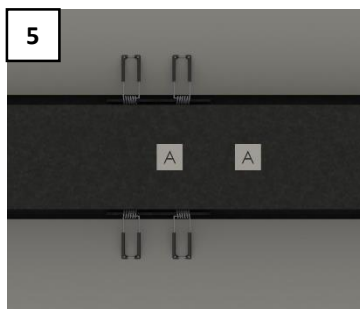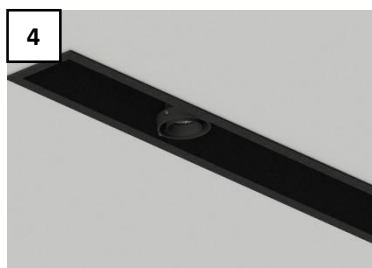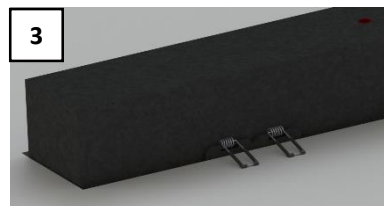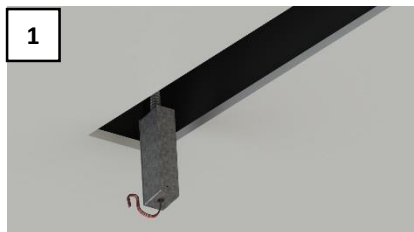

- 
1. CUT AN OPENING IN THE CEILING PER CUTOUT TABLE INSTALL POWER SUPPLIES INSIDE THEIR RESPECTIVE RETROFIT HOUSINGS AND MAKE ELECTRICAL CONNECTIONS TO THE MAIN LINES. BLACK TO BLACK, WHITE TO WHITE AND GREEN TO GREEN. (FIGURE 1).
  2. IDENTIFY THE MATCHING LABELS ON TOP OF THE FIXTURE. WHEN INSTALLING EACH SECTION THESE LABELS IDENTIFY EACH MATING SIDE. (FIGURE 2)
  3. INSTALL ONE SECTION AT A TIME, STARTING FROM AN EDGE. CONNECT EACH POWER SUPPLY TO AN LED MODULE. BLACK TO BLACK, RED TO RED. (CABLES SHOWN IN FIGURE 1)
  4. AFTER EACH MODULE IN THE SECTION HAS BEEN CONNECTED, INSTALL IN THE CEILING OPENING USING THE SPRINGS TO SECURE FROM THE TOP OF THE CEILING. (FIGURE 3 AND 4).
  5. MAKE SURE THAT THE LABELS ON THE SIDES OF EACH SECTION MATCH, A-A, B-B, C-C AND D-D. (FIGURE 5)
  6. ORIENT EACH LIGHT ENGINE TO ACHIEVE THE DESIRED LIGHT DISTRIBUTION. PROCEED TO SWITCH POWER ON. (FIGURE 6)