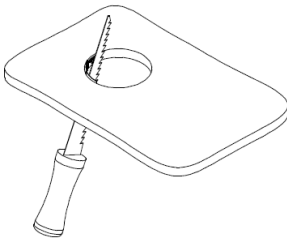

RECESSED DIVA INSTALLATION INSTRUCTIONS



WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

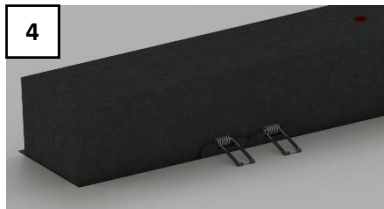
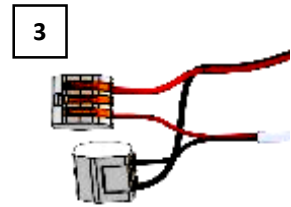
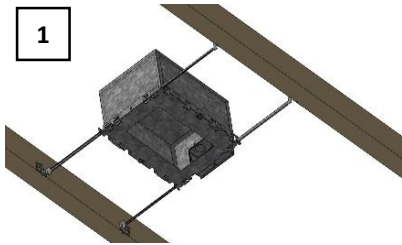
CUTOUT TABLE



FIXTURE	CUTOUT
DIVA 2 RS	85mm X 96mm / 3.35" X 3.78"
DIVA 2 RD	85mm X 172mm / 3.35" X 6.77"
DIVA 3 RS	109mm X 120mm / 4.29" X 4.72"
DIVA 3 RD	109mm X 220mm / 4.29" X 8.66"

NOTE: ROUND FRAME INSTALLATION SHOWN, FOLLOW SAME PROCEDURE FOR SQUARE FRAME.

FIXTURE INSTALLATION



-
1. IF USING AN ENCLOSURE BOX, INSTALL IT USING THE HANGER BARS PROVIDED AND CUT AN OPENING USING THE ENCLOSURE BOX AS A GUIDE.
 - FOR A CLASS 1 ENCLOSURE BOX, RUN CONDUIT TO THE J-BOX ON THE ENCLOSURE AND CONNECT MAIN POWER LINES TO THE POWER SUPPLY. CONNECT THE GROUND TO THE GROUND WIRE ON THE ENCLOSURE, THE NEUTRAL FROM THE POWER SUPPLY TO THE NEUTRAL FROM THE MAIN LINES AND THE HOT FROM THE POWER SUPPLY TO THE HOT FROM THE MAIN LINES. (FIGURE 1)
 - FOR A CLASS 2 ENCLOSURE BOX, RUN CONDUIT TO THE DRIVER RETROFIT. CONNECT THE GROUND TO THE GROUND WIRE ON THE RETROFIT, THE NEUTRAL FROM THE POWER SUPPLY TO THE NEUTRAL FROM THE MAIN LINES AND THE HOT FROM THE POWER SUPPLY TO THE HOT FROM THE MAIN LINES. SEE RETROFIT ENCLOSURE INSTALLATION INSTRUCTIONS FOR FURTHER INFORMATION. (FIGURE 2)
 2. CONNECT THE RED AND BLACK WIRES FROM THE POWER SUPPLY TO THE RED AND BLACK WIRES ON THE FIXTURE USING PROVIDED WAGO CONNECTORS. BLACK TO BLACK, RED TO RED. (CABLES SHOWN IN FIGURE 2, CONNECTORS FIGURE 3)
 3. INSTALL THE FIXTURE IN THE CEILING USING THE SPRINGS TO SECURE IT IN PLACE. (FIGURE 4).
 4. ORIENT EACH LIGHT ENGINE TO ACHIEVE THE DESIRED LIGHT DISTRIBUTION. PROCEED TO SWITCH POWER ON. (FIGURE 6)