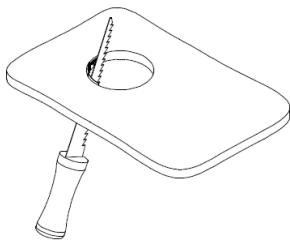

LUNA WJ DOWNLIGHT INSTALLATION INSTRUCTIONS



WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

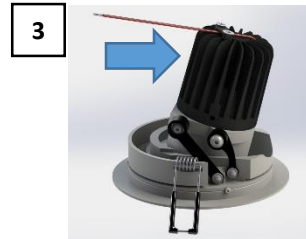
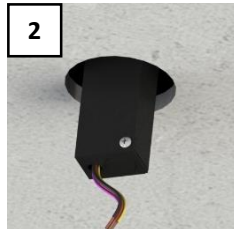
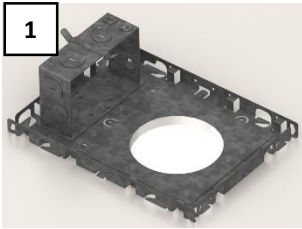
CUTOUT TABLE



FIXTURE	CUTOUT
LUNA 3 WJ	108mm / 4.25"

NOTE: ROUND FRAME INSTALLATION SHOWN, FOLLOW SAME PROCEDURE FOR SQUARE FRAME.

FIXTURE INSTALLATION



1. IF USING AN ENCLOSURE, INSTALL IT USING HANGER BARS. INSTALL POWER SUPPLY AND MAKE ELECTRICAL CONNECTIONS. BLACK TO BLACK, WHITE TO WHITE AND GREEN TO GREEN. CUT HOLE IN THE CEILING DRYWALL USING THE HOLE IN THE ENCLOSURE AS A GUIDE. SEE ENCLOSURE INSTALLATION INSTRUCTIONS FOR FURTHER INFORMATION. (FIGURE 1)
2. IF NOT USING AN ENCLOSURE, CUT A HOLE PER THE CEILING CUTOUT TABLE. INSTALL THE POWER SUPPLY USING THE DRIVER RETROFIT KIT. REFER TO THE DRIVER RETROFIT KIT INSTALLATION INSTRUCTIONS FOR INFORMATION ON HOW TO INSTALL. (FIGURE 2)
3. CONNECT OUTPUT OF POWER SUPPLY TO THE FIXTURE. RED TO RED, BLACK TO BLACK USING PROVIDED WAGO CONNECTORS. ADJUST THE WALL WASHER ANGLE BY MOVING THE LIGHT ENGINE BEFORE INSTALLING IN THE CEILING. (FIGURE 3)
4. OPEN SPRINGS AND INSERT THE FIXTURE INTO THE TRIM OPENING WITH THE HEATSINK FIRST. MAKE SURE THE WIRES ARE ALL THE WAY IN. (FIGURE 4)
5. TURN POWER ON. (FIGURE 5)