

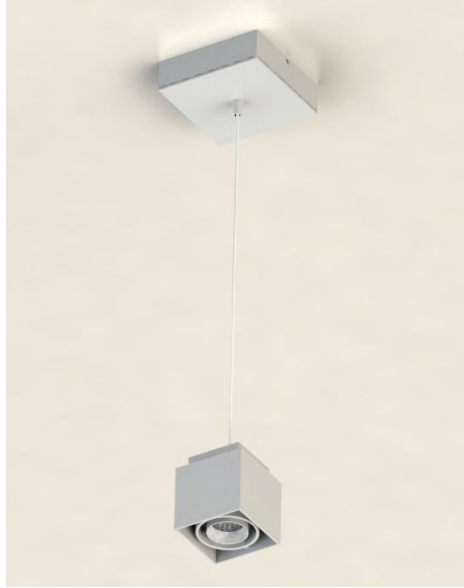
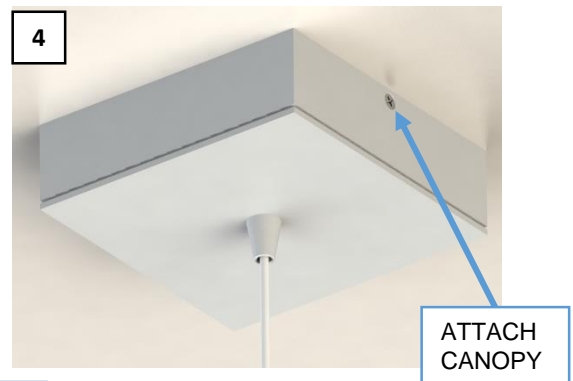


DIVA PENDANT INSTALLATION INSTRUCTIONS

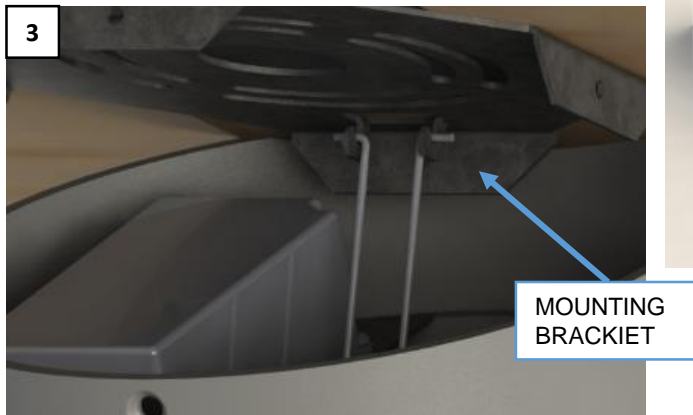

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. **RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

FIXTURE INSTALLATION

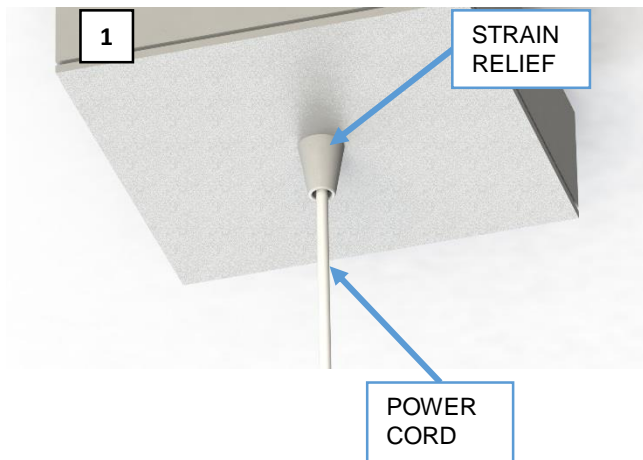

1. TO ADJUST FIXTURE HEIGHT,
 - UNSCREW THE STRAIN RELIEF ON THE CANOPY SIDE TO ALLOW THE POWER CORD TO SLIDE THROUGH. ADJUST TO THE DESIRED HEIGHT. (FIGURE 1)
 - IF NECESSARY, CUT THE EXCESS CABLE IN THE CANOPY, RESTRIP CABLE TO SHOW BLACK AND RED WIRES. RESTRIP BLACK AND RED WIRES AND CONNECT THEM TO THE BLACK AND RED WIRES ON THE POWER SUPPLY RESPECTIVELY USING THE WAGO CONNECTORS.
2. ATTACH MOUNTING BRACKET TO J-BOX USING 2X SCREWS. (FIGURE 2)
3. HANG THE BONGO PENDANT FROM THE HOOKS ON THE MOUNTING BRACKET. (FIGURE 3)
4. CONNECT MAIN POWER LINES TO THE POWER SUPPLY, GROUND TO GREEN ON THE FIXTURE, NEUTRAL TO WHITE/BLUE ON THE FIXTURE AND HOT TO BLACK/BROWN ON THE FIXTURE.
5. ATTACH CANOPY COVER TO MOUNTING BRACKET USING 2 PROVIDED FLAT HEAD SCREWS ON THE SIDES. (FIGURE 5)
6. TURN ON POWER TO LIGHT FIXTURE.