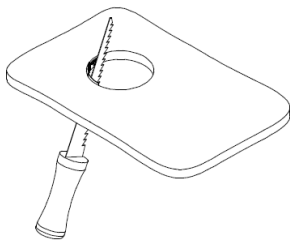

STELLA QWJ DOWNLIGHT INSTALLATION INSTRUCTIONS



WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. **RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

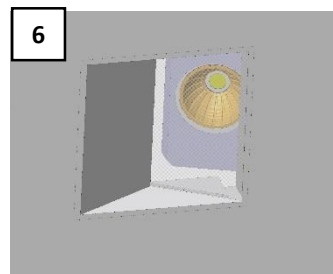
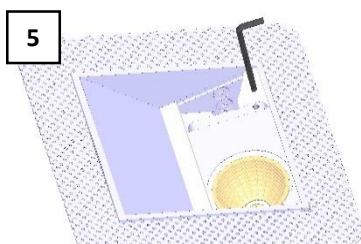
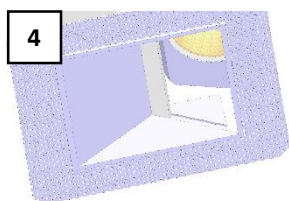
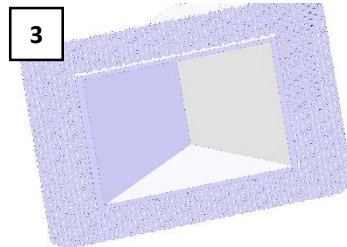
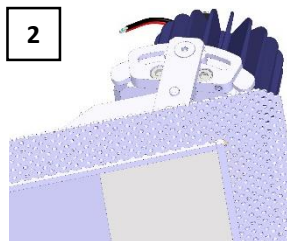
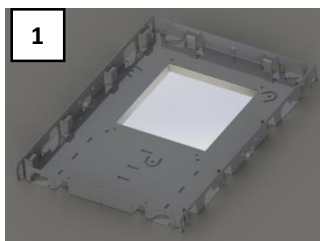
CUTOUT TABLE



FIXTURE	CUTOUT
STELLA QWJ	4.25"X4.06" / 108mmX103mm

NOTE: ROUND FRAME INSTALLATION SHOWN, FOLLOW SAME PROCEDURE FOR SQUARE FRAME.

FIXTURE INSTALLATION



-
1. IF USING AN ENCLOSURE, INSTALL IT USING HANGER BARS. INSTALL POWER SUPPLY AND MAKE ELECTRICAL CONNECTIONS. BLACK TO BLACK, WHITE TO WHITE AND GREEN TO GREEN. CUT HOLE IN THE CEILING USING THE HOLE IN THE ENCLOSURE AS A GUIDE. (FIGURE 1)
 2. IF NOT USING AN ENCLOSURE, CUT A HOLE PER THE CEILING CUTOUT TABLE. INSERT THE POWER SUPPLY AND INSTALL. CONNECT BLACK TO BLACK, WHITE TO WHITE AND GREEN TO GREEN.
 3. CONNECT FIXTURE BLACK AND RED WIRES TO THE OUTPUT OF THE POWER SUPPLY. BLACK TO BLACK AND RED TO RED. (FIGURE 2)
 4. INSTALL THE STELLA QWJ FRAME AS SHOWN. USE FIBERGLASS TAPE ON THE EDGES OF THE PERFORATED SHEET. SECURE THE MUD FRAME WITH NAILS IN THE HOLES OF THE PERFORATED SHEET. (FIGURE 3)
 5. SLIDE GLASS UPWARD TO REACH LED LIGHT SOURCE AND ORIENT. (FIGURE 4)
 6. LOCK IN POSITION BY TIGHTENING SETSCREW AS SHOWN. (FIGURE 5)
 7. SLIDE GLASS BACK DOWN TO ITS ORIGINAL POSITION AND APPLY MUDDING MATERIAL OVER THE PERFORATED SHEET AND AROUND THE TRIM FRAME. (FIGURE 4)